



■ Installation (External Corner)

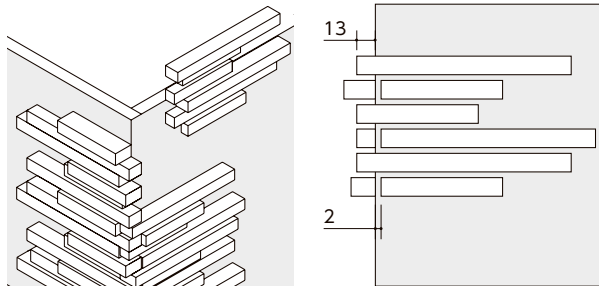

An external corner can be tiled with combinations of External Corner Starter Units and their vertically flipped Units. Allow a joint width of 2 mm between the back faces of each unit and side faces of the combined units.

■ Installation (Internal Corner)

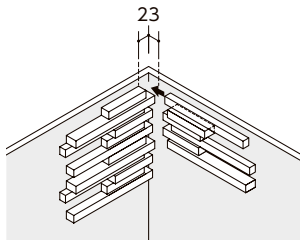

External Corner Starter Units can also be used to tile internal corners. Set recessed tile of both units 23 mm from the internal corner. Since the bedding is visible from between the gaps of the tiles, apply adhesive to the corner ends.

■ Installation Photo

